



## INTERIOR COATINGS MANUAL

Congratulations on choosing one of the GYEON high quality coatings. With this user manual we would like to share with you basic tips on surface preparation and application to ensure your complete safety during application and satisfaction with the end result.


### Q<sup>2</sup> LEATHERSHIELD EVO

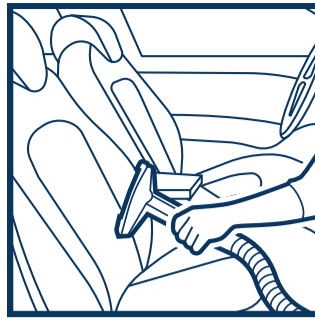

Vacuum the leather and ensure it is free of debris and dust.

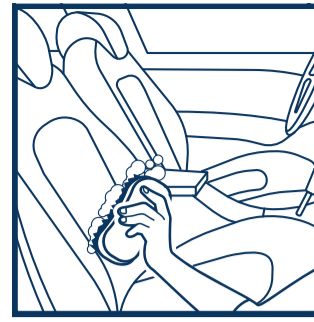

Clean the leather with the use of Q<sup>2</sup> LEATHERCLEANERS. Do not use cleaners containing any softening additives!

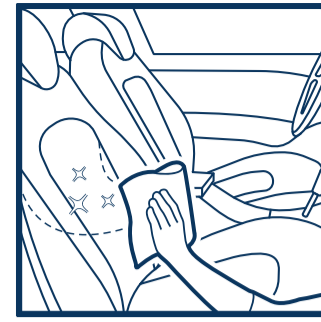

Wipe remainings of cleaners with a damp towel. Inspect the leather.




Make sure the surface is completely dry before starting the application of Q<sup>2</sup> LEATHERSHIELD EVO.


### SURFACE PREPARATION:

Proper surface preparation is crucial for the bonding and durability of the installed coating. Always mind these simple rules:

- the surface should be decontaminated and free of any residue;
- old waxes, glazes or coatings should be stripped before proceeding

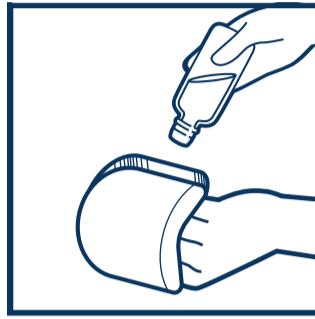

Use a generous amount of product on the included block applicator. You can also apply Q<sup>2</sup> LEATHERSHIELD EVO with a Q<sup>2</sup> MF Applicator for maximum efficiency.

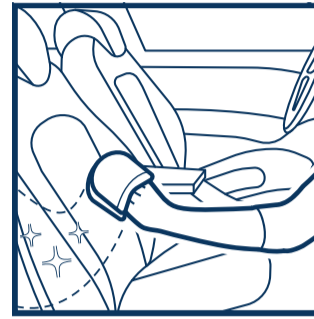

Ensure even application of product. Do one element at the time.



Let the product sit for 3-5min, inspect and remove any leftover with a Q<sup>2</sup> BALDWIPE EVO.



Let the product cure for a minimum of 6h before using the coated surface.

### TECH-FACTS AND APPLICATION TIPS:

Never work in direct sunlight.  
Ensure the area you work is well ventilated.  
Ensure the car stays in stable conditions without the risk of rainfall or rapid humidity changes after the coating application.  
Always respect individual product application instructions.  
The coating is fully dry after 24 hours.  
Only after that time the car can be driven.




- Make sure you apply the product on modern automotive leather upholstery with closed structure.
- You may apply the product on high quality artificial leather.
- Do not apply on open structure, i.e. aniline or semi-aniline leather.
- Do not apply on vintage, worn or restored leather.
- Always apply first on a hardly visible test section. Check for discolouration or colour transfer before you move on.
- After application, we recommend to inspect the surface with an inspection lamp.
- If you see highspots/streaks within the first 15min, apply a bit more product to even them out and wipe off immediately.


### PRECAUTIONS:

- Skin protection recommended.
- Work in a well-ventilated area.
- Store in a dark, dry and cool place.
- Keep out of reach of children.


### Q<sup>2</sup> ANTIFOG

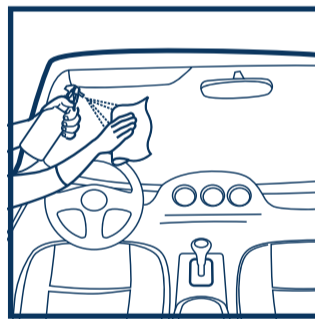


Ensure that the surface is well cleaned with Q<sup>2</sup> GLASS. Use of Q<sup>2</sup> PREP for further degreasing is recommended.

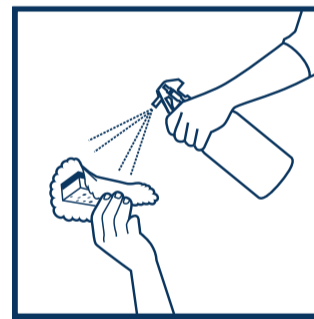

Apply a small amount of the product onto the surface using a suede applicator.

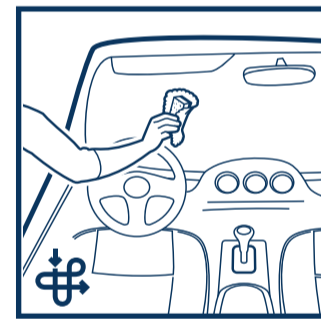


Always apply in a criss-cross motion until only a hardly visible haze remains.

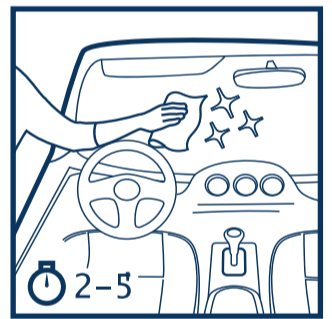

Wipe after 2-5 minutes with a soft microfibre.

### Q<sup>2</sup> PURIFY COAT

#### PLASTIC / TRIM / DASH

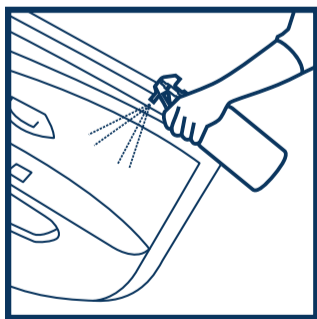

Clean the surface with dedicated cleaner.




Wipe remaining of cleaner.



Make sure the surface is completely dry before starting application of Q<sup>2</sup> Purify Coat.



Use generous amount of product on the included applicator. You can apply Q<sup>2</sup> Purify Coat with a Q<sup>2</sup> MF Applicator as well.

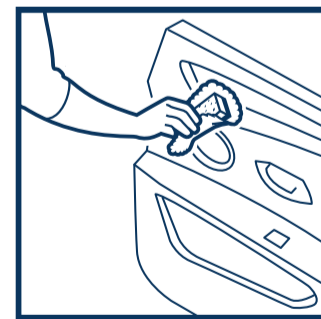

Ensure even application of the product. Do one element at the time.




Let the product to dry. Wipe possible remaining.




If you notice uneven application, reapply over it and wipe it off.

# Q<sup>2</sup> PURIFY COAT

## LEATHER

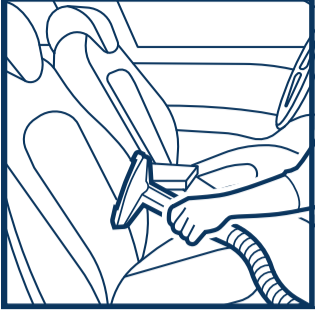


Vacuum the leather and ensure it is free of debris and dust.

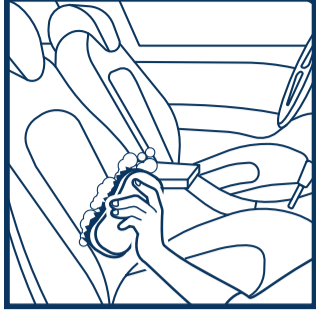


Clean the leather with the use of Q<sup>2</sup>M LEATHERCLEANERS. Do not use cleaners containing any softening additives!




Wipe remainings of cleaners with a damp towel. Inspect the leather.

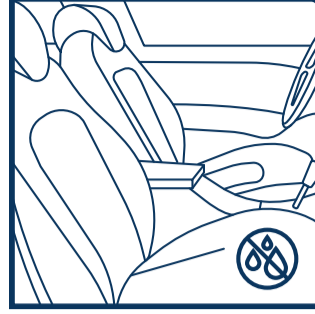

Make sure the surface is completely dry before starting application of Q<sup>2</sup> Purify Coat.

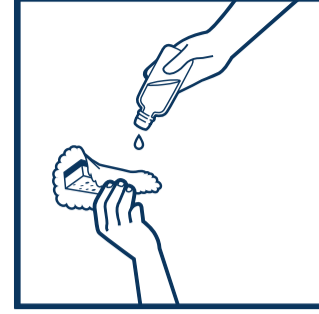

Use generous amount of product on the included applicator. You can apply Q<sup>2</sup> Purify Coat with a Q<sup>2</sup>M MF Applicator as well.

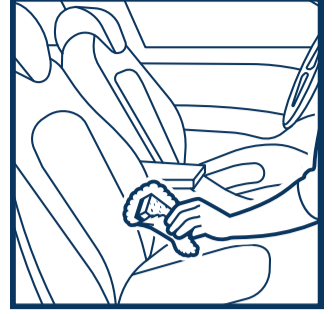

Ensure even application of the product. Do one element at the time.



Let the product to dry. Wipe possible remaining.



If you notice uneven application, reapply over it and wipe it off.